Meine® Hennen

The original mite trap – Milbensperre by MeineHennen

This package contains:

A: Angle components - 2x
B: Carriage bolts - 2x
C: Metal washer - 2x
D: Wing nuts - 2x
E: Wood screws - 8x
F: Plastic containers - 2x
G: Plastic cap - 2x

You will also need these materials:

- Perch max. 4,7 cm / 47 mm thick
- Electric screwdriver with a T20 Bit
- Wood drill with a bit size 6
- Ruler
- Pencil
- Vegetable oil like sunflower- or olive oil

Step by step mounting instruction:

1. Mark the position of the perch on the wall.
2. Place the angle components (A) and the plastic container (F) with cap (G) on top of each other and hold the angle so that the top edge of the lid is at the marked line height.
3. Now fix the brackets on both sides with 4 wood screws each (E).
4. Use the wood drill to drill the holes at both ends of the perch.
5. The perch should be mounted without touching the wall.
6. Guide the carriage bolts (B) through the perch, plastic container (F) with cap (G) and angle components (A) from above.
7. Fasten each with a washer (C) and a wing nut (D).
8. Finally, fill both plastic containers (F) with Vegetable oil.

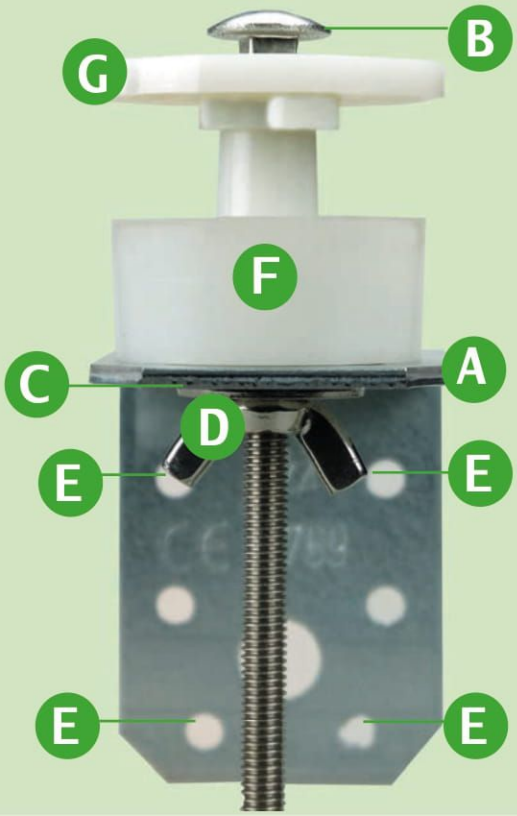

Premium quality · Made in Germany · Easy to assembly

Hess Vertrieb UG (haftungsbeschränkt) • Gneisenaustr. 28 • 52511 Geilenkirchen • www.meinehennen.de • E-Mail: info@meinehennen.de • EAN: 4260690320420